 
 


PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packaging. If the package is damaged in any way, please contact the manufacturer as you may accidentally damage the product.

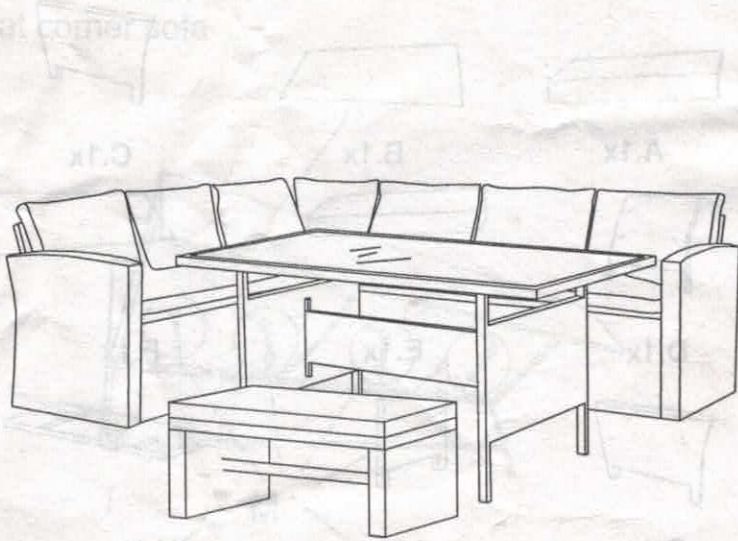 


ASSEMBLY INSTRUCTIONS

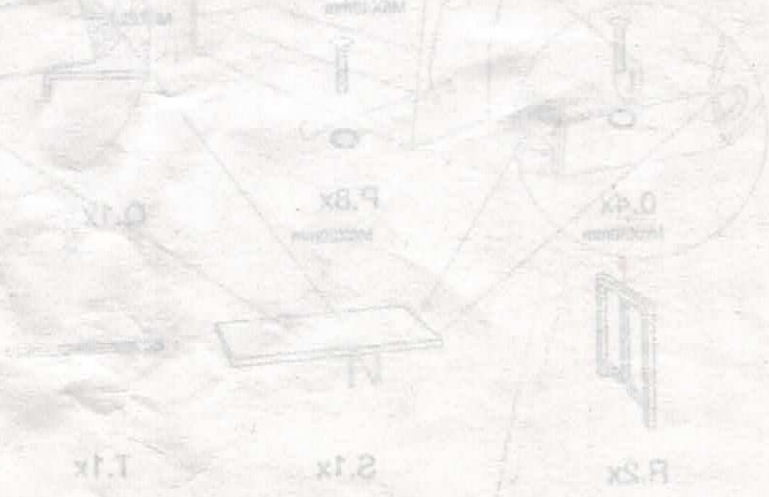


PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.



A.1x

 


B.1x




C.1x



 D.1x



E.1x

 

F.1x



 
G.1x



H.1x



I.1x



J.1x



K.2x



L.1x



M.17x
M6X40mm



 
N.11x
M6X35mm



O.4x
M6X30mm



P.8x
M6X20mm



Q.1x



R.2x



S.1x

 


T.1x





Do not fully tighten bolts until assembly is complete.

3seat corner sofa

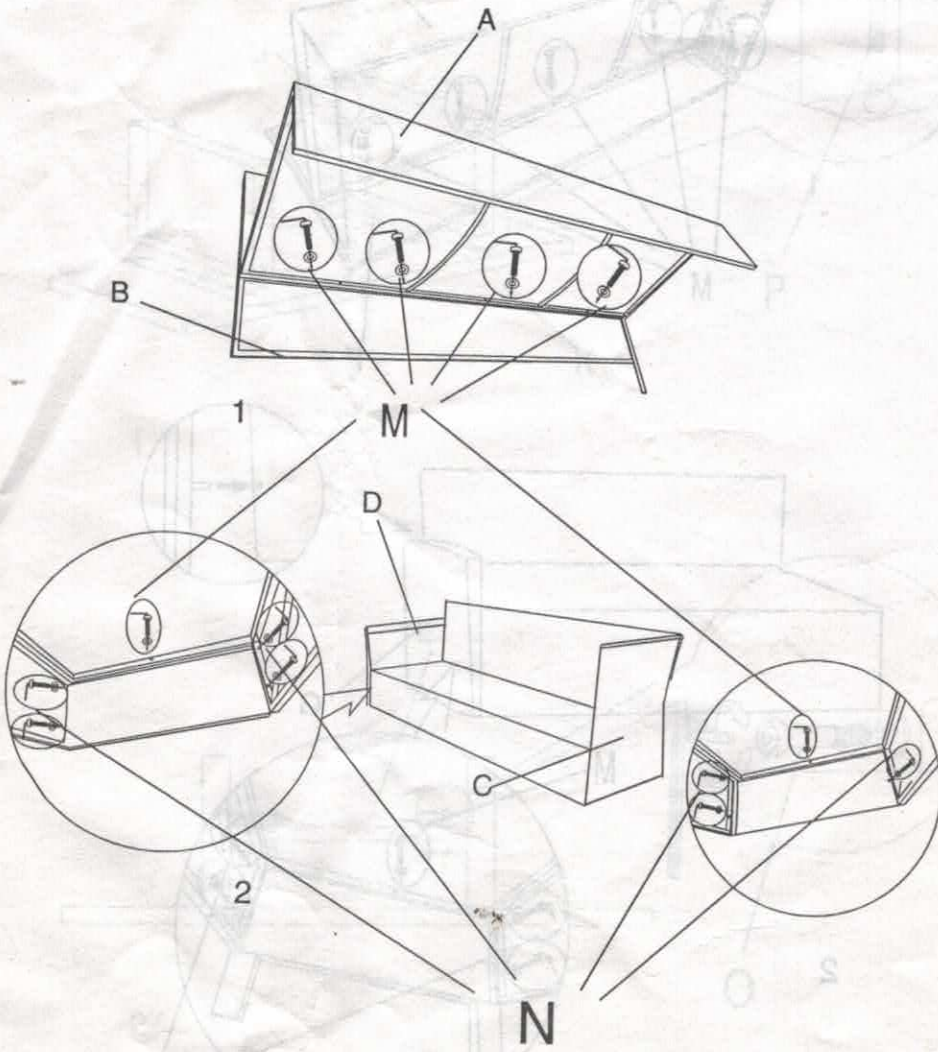


3seat sofa

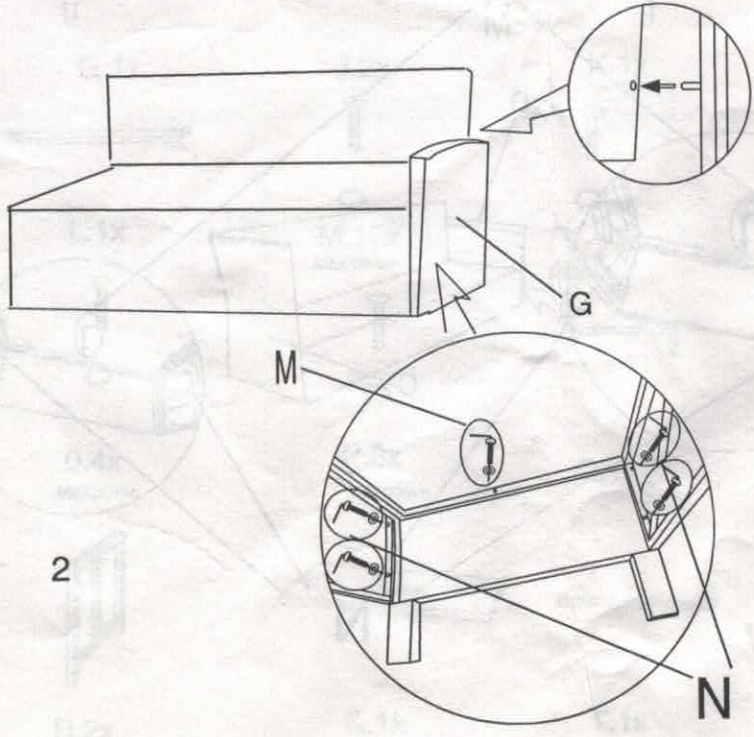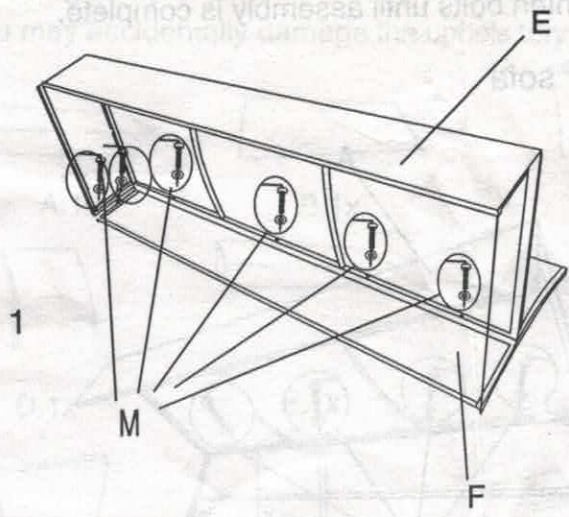  


Dining table

 Bench

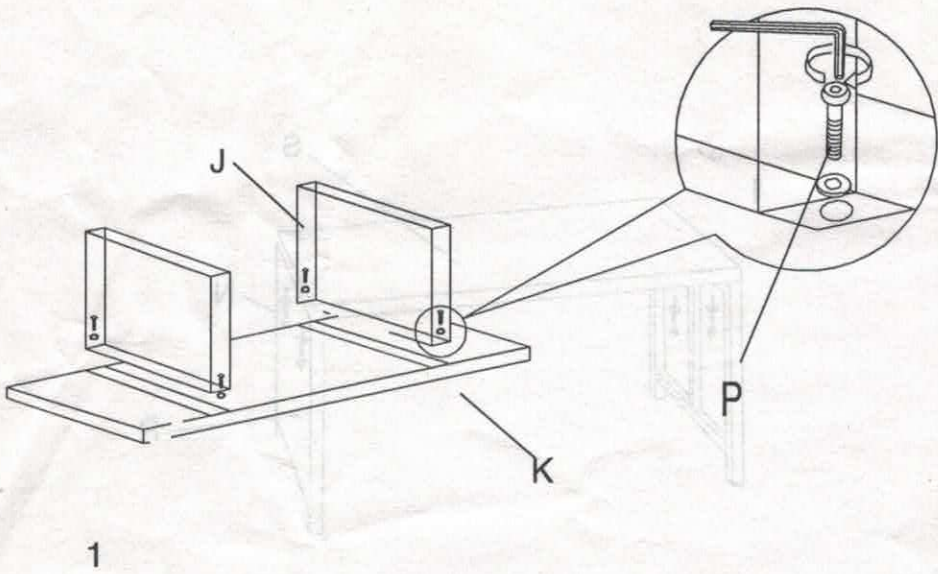

1

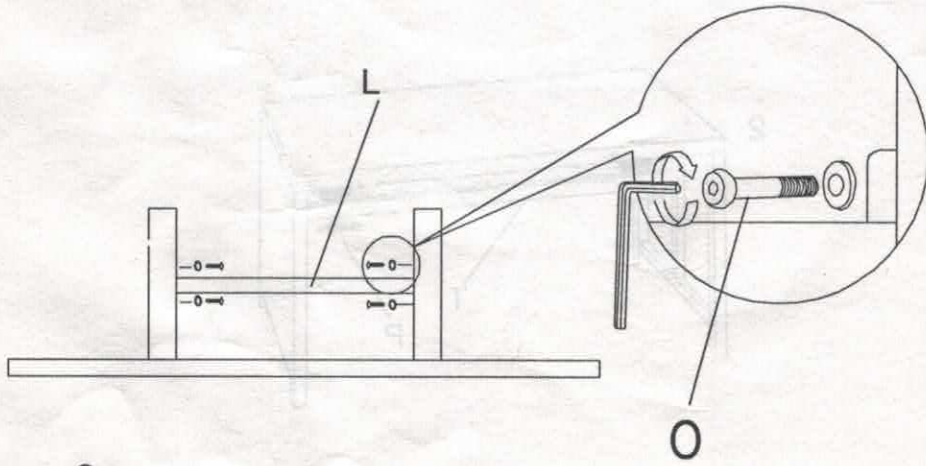 

2

Bench

Dining table

