



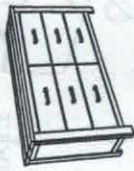


ASSEMBLY INSTRUCTIONS

STEP 1 : Remove HANDLE (2) using a Phillips head screw driver as shown in illustration STEP - A. Re-install the HANDLE (2) as per diagram STEP - B. Repeat STEP - A STEP - B until HANDLE (2) are attached correctly.

PART LIST		
NO	ITEM	QTY
A	 1 PC	1 PC

HARDWARE LIST		
NO	ITEM	QTY
1	Truss Head Machine Screw #4x38mm Blk 	12 PCS
2	HANDLE L:150mmxW:21.6mmxH:26mm 	6 PCS

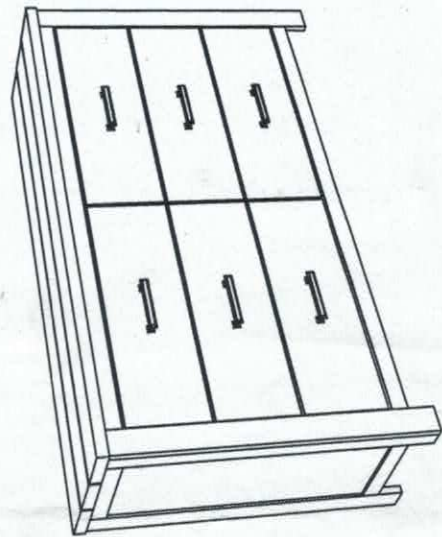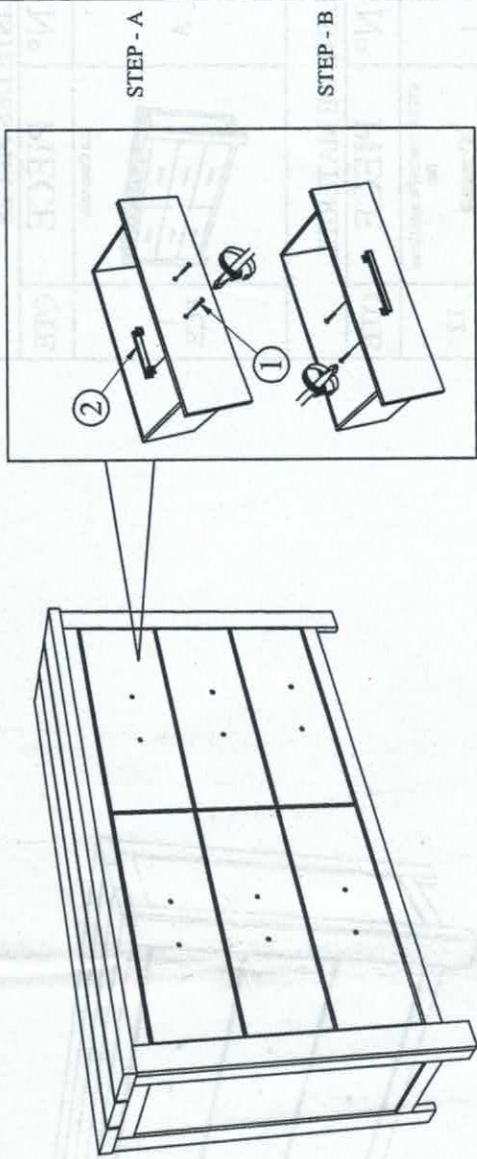

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.