

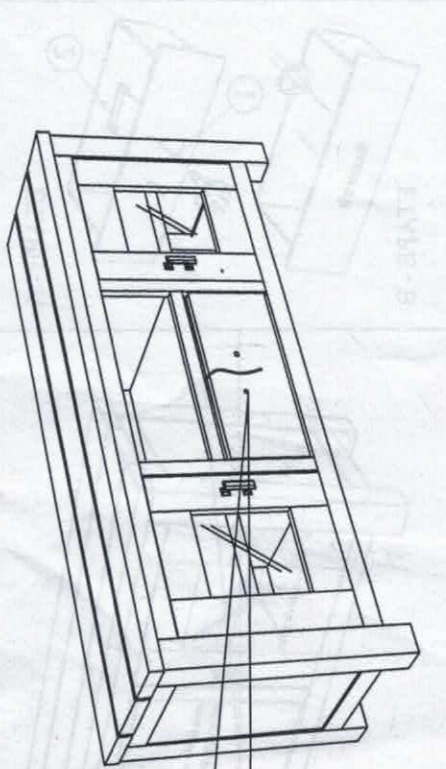


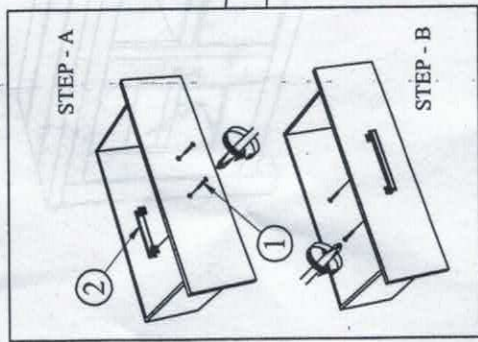

ASSEMBLY INSTRUCTIONS


STEP 1 : Remove HANDLE (2) using a Philips head screw driver as shown in illustration STEP - A. Re-install the HANDLE (2) as per diagram STEP - B. Repeat STEP - A STEP - B until HANDLE (2) are attached correctly.

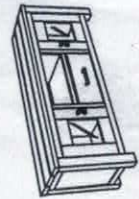

MODEL :
C63770-ETV/C81080-ETV
TV CONSOLE

PART LIST		
NO	ITEM	QTY
A	TV CONSOLE 	1 PC

HARDWARE LIST		
NO	ITEM	QTY
1	Truss Head Machine Screw m4x38mm Blk 	2 PCS
2	HANDLE L150mmxW21.0mmxH26mm 	1 PC



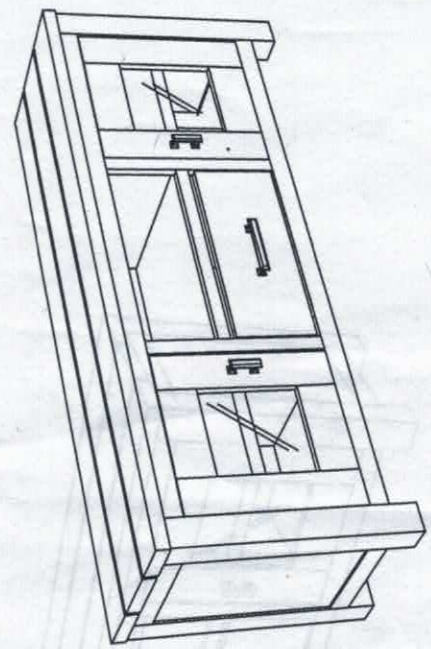



COMPLETED ASSEMBLY



NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

INSTRUCTIONS D'ASSEMBLAGE

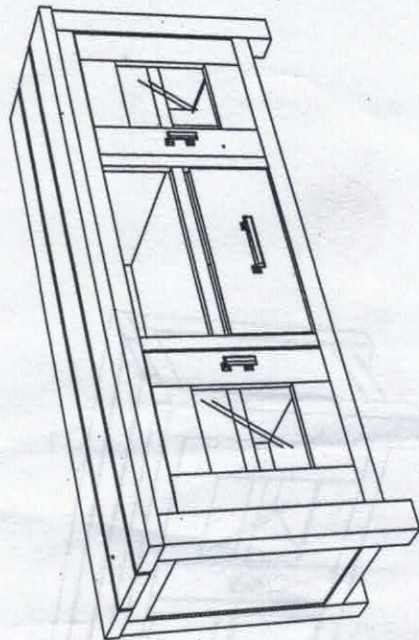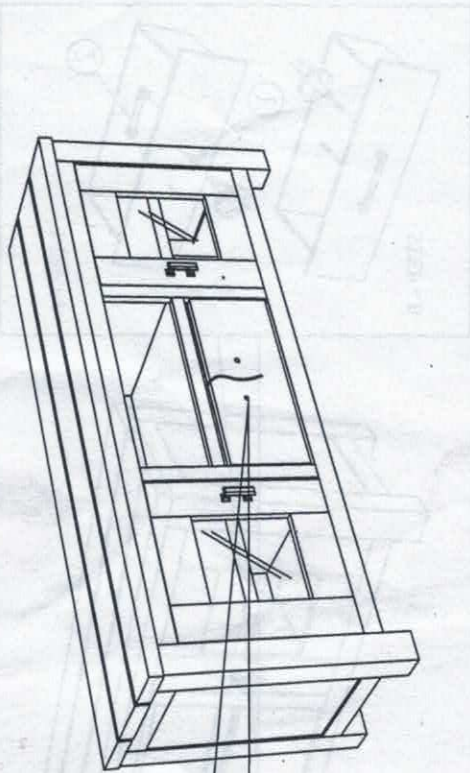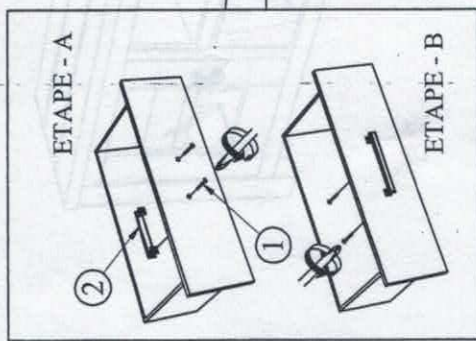ÉTAPE 1 : Dévisser POIGNÉE (2) en utilisant un tournevis cruciforme, comme indiqué dans l'ÉTAPE-A. Réinstaller la POIGNÉE (2) comme indiqué dans l'ÉTAPE-B. Répéter les ÉTAPES A & B pour chaque POIGNÉE (2).

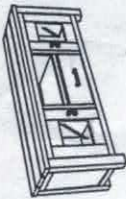

MODÈLE: C63770-ETV/C81080-ETV la télé CONSOLE		
N°	PIÈCE	QTE
A	la télé CONSOLE 	1 PCE

N°	PIÈCE	QTE
1	VIS DE POIGNÉE m4x38mm Blk 	2 PCS
2	POIGNÉE L150mmxW21.6mmxH28mm 	1 PCE

ASSEMBLAGE TERMINÉ

REMARQUE : RESERRER LES VIS RÉGULIÈREMENT. À L'USAGE, LES VIS SE DESERRENT. VÉRIFIER QUE LES VIS SOIENT SERRÉS TOUTES LES 6-8 SEMAINES.