
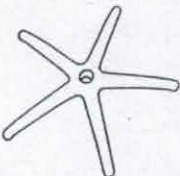

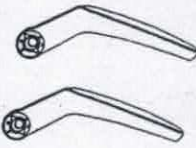
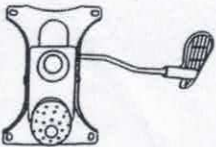





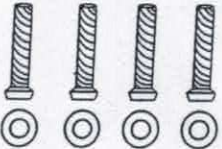

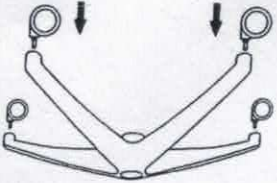
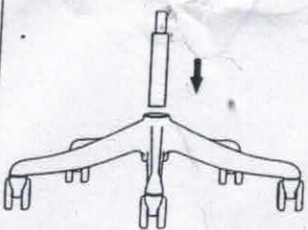
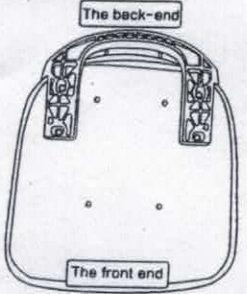
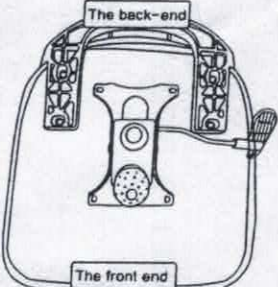
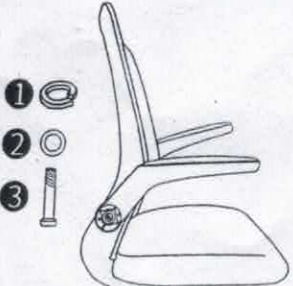
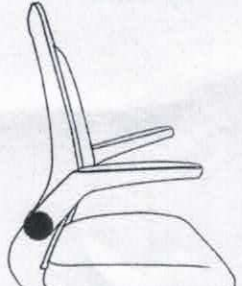
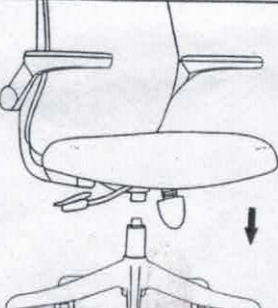


B815 OFFICE CHAIR INSTALLATION INSTRUCTIONS

☰ ACCESSORIES DISPLAY (SUBJECT TO ACTUAL SIZE)

	castors 5pcs		base 1pc		gas lift 1pc		armrest 2pcs
	mechanism 1pc		backrest 1pc		seater 1pc		armrest dust cover 2pcs
	hex wrench 1pc		base short screw 4pcs		backrest middle screw 4pcs		
	armrest long screw 2pcs	notice: before installing the office chair, please sort the screws first, and measuring screw length, so that easy to install					

✂ INSTRUCTIONS PICTURES (SUBJECT TO ACTUAL SIZE)

			
1 insert the pulleys in sequence into the holes of the five-star foot	2 align the gas lift to the foot hole and insert	3 connect the backrest to the cushion with four middle screws and spacers	4 install the mechanism with four short screws and spacers
			
5 Use two armrest screws plus shrapnel plus gasket to connect the armrest to the back of the seat	6 after confirming that armrest screws are tightened, cover with a dust cover	7 plug the upper part of the assembled chair into the gas lift.	